For Style 1220P40-601-O Assembly Instruction Sheet #IS- 1220P40-601-O


rdiver, plans, wire culturs, wire strippers, electrical tape, safety glasses

ools Required: Pathed coreative; Philips coreative; pilon, who culten, who stippen, electrical laps, safety glasses. Aget Seases: 120V LED '95W DHAMABLE (4000) Topusation: Idaniy and Impact all parts below beginning installation. Check puckage content let and diagrams below to be sure all parts are resent. If any parts are missing or damaged, do not alternat to assemble, Install, or operate the titute. Context outsiner service for replacement

Marnings and Cautions

These instructions are provided for your safety. It is very important you read them completely before installing the ticture. We strongly recommend that a licensed, professional electricism perform the installation. rum off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

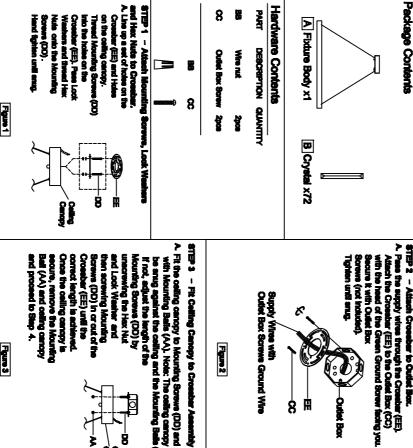



A. Pees the supply wires through the Croseber (EE).
Attach the Croseber (EE) to the Outlet Box (CC)
with the head of the Green Ground Sorew facing you.
Secure it with Outlet Box
Sorews (not included). STEP 2 - Attach Croseber to Outlet Box. ighten until erup. Supply Wires with Outlet Box Screws Ground Wire Figure 2 8

STEP 5 - Install Ceiling Canopy to Calling

Figure 4

A. Fit the ceiling canopy to Mounting Screwe (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be snug against the ceiling and the Mounting Balls (AA). If not, adjust the length of the mecrewing the Hex Nut nd Look Weather and founting Screws (DD) by en screwing Mounting 8

 

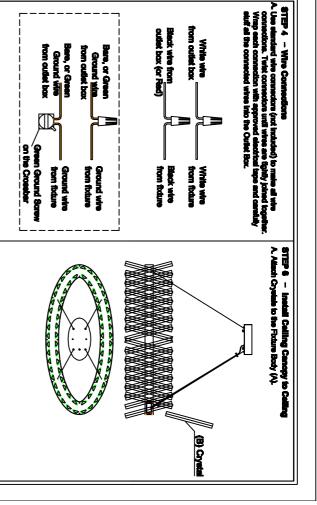

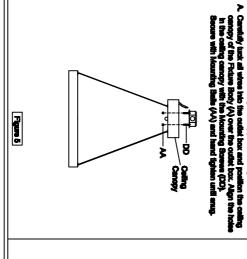


Figure 3

Figure 0