For Style 1032P39-14-RC Assembly Instruction Sheet #S-1032P39-14-RC


Source: (14) G9 40W Maximum(Not Include), valed Assembly Time: 20-30 minutes valent identity and beautiful. driver, pilers, who cultura, who shippers, electrical tape, safety glasses

ration: Identify and inspect all parts before beginning installation. Check package content lat and diagrams below to be sure all parts are nt. If any parts are miseing or damaged, do not attempt to assemble, install, or operate the finitum. Contact customer service for replacement.

△Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electrician parform the installation.

Disconnect fluture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before remove

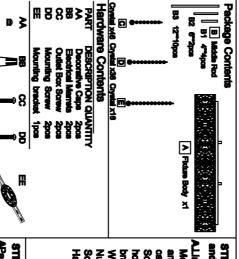

and Hex Nuts to Mounting bracks STEP 2 - Attach Mounting Screws, Lock Washers

Alline up a set of holes on the Nuts onto the Mounting bracket (EE). Pass Lock Screws (DD) into the canopy. Thread Mounting and Holes on the celling Mounting bracket (EE) Hand tighten until snug Washers and thread Hex Sonews (DD). noies on the Mounting

ġ À

APass the supply wires through the Mounting STEP 3 - Attach Mounting bracket to Outlet Box Screw facing you. Secure It with Outlet Box bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground

Figure 1

Screws (CC). Tighten until snug. Supply Wires with Outlet Box Screws Ground Wire Figure 2 8 **Outlet Box**

the fxiture body then the same

ð

Ð

Canopy ÷

Middle Rods with

finally fix the Canopy other pieces of Rods to connect the

Ð


룺

A(Floture Body)

with the Rods.


AThread the power cord to the Middle Rods, fix the STEP 1 - Install Rods to Fixture Body


> A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Decorative Caps (AA). Note: The ceiling canopy should be anug against the ceiling and the Decorative Caps (AA). If not, adjust the length of the Mounting Screws (DD) by STEP 4 - Fit Celling Canopy to Mounting bracket Ass and ceiling canopy and proceed to Step 5. ce**lling canopy is secure, remove the Decorative Caps (AA)** bracket (EE) until the correct length is achieved. Once the unecrewing the Hex Nut and Lock Wash ing Mounting Screws (DD) in or out of the Mounting

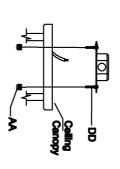


STEP 5 - Wire Connections

A Use standard wire connectors to me connections. Twist connectors until wires are tightly joined together. Whap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



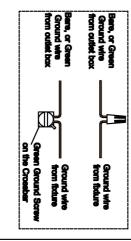



A. Carefully tuck all wires into the out STEP 6 - Install Ceiling Canopy to Ceiling ceiling canopy of the Fbdure Body (A) over the cullet box.
Align the holes in the ceiling canopy with the Mounting
Screws (DD). Secure with Decorative Caps (AA) and hand ġ





A. Install bulbs (Not Include) onto sockets and push B.Please put the crystal (1) (2) (3) to the Fixture Body (A). snug into place.

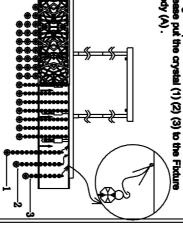

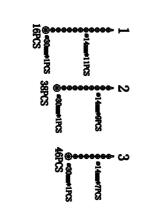

2 of 2