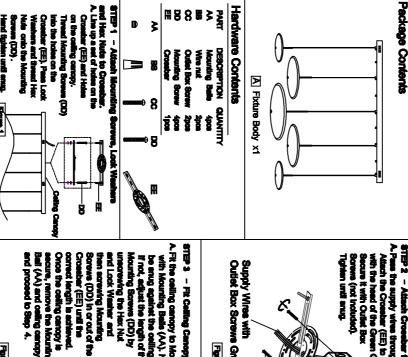
For Style 1204P43 Assembly Instruction Sheet #IS-1204P43


oole Required: Fatheed screwdiver, Philips screwdiver, pliers, wire culters, who stippers, electrical tape, safely glasses. (b) 150°LED "I'W DIMAVAILE (2000K) with deserver. (b) 150°LED "I'W DIMAVAILE (2000K) with the statement Assembly Time: 19-30 mirules reparation that the statement of the s


△Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before repiscing builbs. Make sure builts are given sufficient time to cool before removed



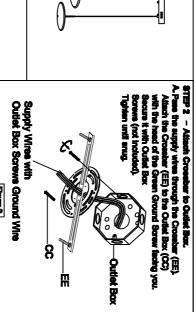

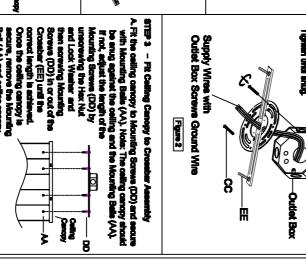

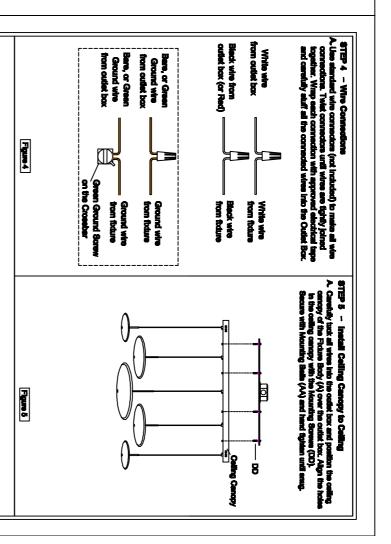


Figure 3