## For Style 4281W Assembly instruction Sheet #IS-4281W


ols Required: Fashead screwitiver, Philips screwitiver, pliers, wire culturs, who shippers, electrical teps, safety glasses. pit Sources (1): 30 Candelston Base Buille 40W Mactinum (Not Include). Stream Assessibly Titase: 19.00 mitutes spannifican: kiemity and Impact all parts ballow bagirning Installation. Check package content list and discrema ballow to b

ration: Identity and inspect all parts before beginning installation. Check peckage content list and diagrams below to be sure all parts are A. If any parts are missing or damaged, do not allempt to assemble, halall, or operate the fidure. Context customer service for replacement

## Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electricism if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the tidure. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing builbs. Make sure builts are given sufficient time to cool before removal

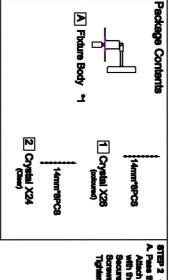

A. Pass the supply wires through the Crossber (EE)
Attach the Crossber (EE) to the Outlet Box (CC) STEP 2 - Attach Crossbar to Outlet Box. with the head of the Gre Secure it with Outlet Box gure libru netrigi en Ground Screw facing you

Supply Wires with

A. Fit the ceiling canopy to Mounting Screws (DD) and secure with Screw (AA). Note: The ceiling canopy should STEP 3 — Fit Ceiling Canopy to Crossber Assembly unacrewing the Hex Nut and Lock Washer and be anug against the ceiling and the Screw (AA).
If not, adjust the length of the founting Screws (DD) by larews (DD) in arout of the nen screwing Mounting Celling Canopy

Celling Canop

1 Crystal X26

2 Crystal X24

I AMERICA

0

and Hex Nuts to Crossber.

A. Line up a set of holes on the

Celling Canopy

uts onto the Mounting

nd proceed to Step 4.

Figure 1

iber (EE). Pass Lock isns and thread Hax

to the holes on the

e ceiling canqy. ed Mounting Screwe (DD)

STEP 1 - Attach Mounting Screws, Lock Washers

# B 8 #


Outlet Box Screw founding Screw

200 200 200 100 100

Hardware Contents

DESCRIPTION QUANTITY

Outlet Box Screws Ground Wire Figure 2 **Outlet Box** Q. ...

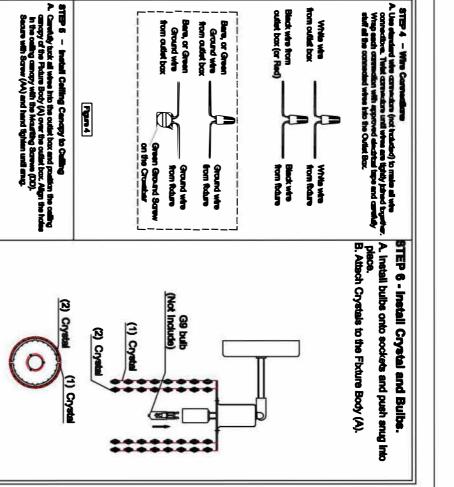

Page 6

795