


Assembly Instruction Sheet #S- 5062C12C For Style 5062C12C

Tools Required: Flathead screwdriver, Philips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (5) 60 Base Bulb 40W Medium(Bulb Included).
Estimated Assembly Time: 15-30 minutes.
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

- ▣ Fixture Body x1
- ▣ 14mmX7PCS
- ▣ 40mmX1PCS
- ▣ 1 CrystalX12




- ▣ Metal Shade x1
- ▣ 2 Crystal X7

- ▣ 14mmX7PCS
- ▣ 40mmX1PCS
- ▣ 1 CrystalX12
- ▣ 2 Crystal X7

Hardware Contents

| PART | DESCRIPTION | QUANTITY |
|------|------------------|----------|
| BB | Wire nut | 2pcs |
| CC | Outlet Box Screw | 2pcs |



STEP 1 - Release Mounting bracket from Ceiling Canopy .

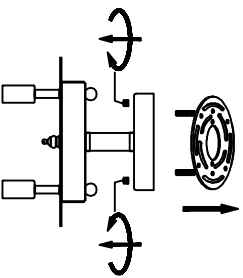


Figure 1

STEP 2 - Install Metal Shade to Fixture Body

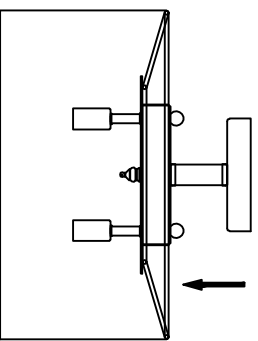


Figure 2

STEP 3 - Attach Mounting bracket to Outlet Box
 A) Pass the supply wires through the Mounting bracket (EE).
 Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (CC). Tighten until snug.

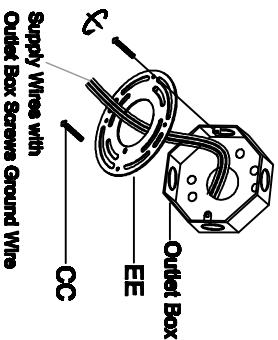


Figure 3

STEP 4 - Wire Connections
 A) Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

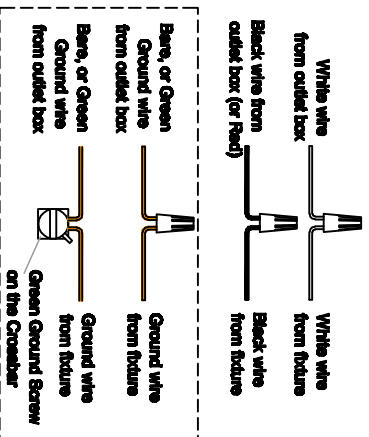


Figure 4

STEP 5 - Install Ceiling Canopy to Ceiling

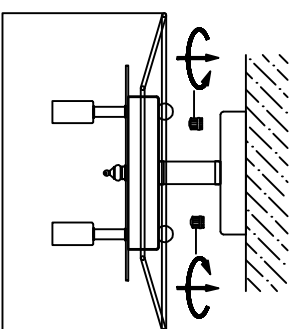


Figure 5

STEP 6 - Install Bulbs and Crystal

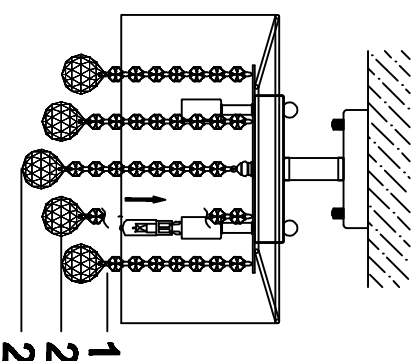


Figure 6