












Assembly Instruction Sheet #S-5443P18 For Style 5443P18

Total Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (4) E27 Base Bulb, 60W Maximum (Not Included)
Estimated Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents		STEP 1 - Release Mounting bracket from Ceiling Canopy.	
	1 Fixture Body x1		1 Crystal x16
	1 Acrylic x1		12 Crystal x12
	1 Middle Rod		8 Crystal x8
	1 Ceiling Canopy x1		5 Crystal x5
	1 Part x1		
Hardware Contents		STEP 2-Install Middle Rod,Ceiling Canopy to Fixture Body.	
PART	DESCRIPTION	QUANTITY	
BB	Wire nut	2pcs	
CC	Outlet Box Screw	2pcs	
			
			

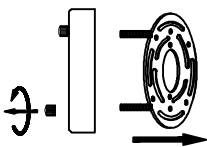


Figure 1

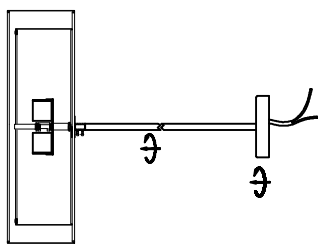


Figure 2

STEP 3 - Attach Mounting bracket to Outlet Box
 A. Pass the supply wires through the Mounting bracket (EE).
 Attach the mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw holding you. Secure it with Outlet Box Screws. Tighten until snug.

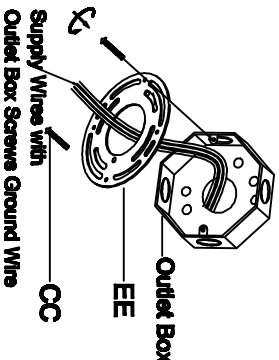


Figure 3

STEP 4 - Wire Connections
 A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

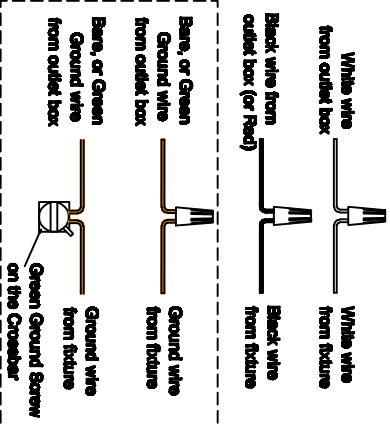


Figure 4

STEP 5 - Install Ceiling Canopy to Ceiling

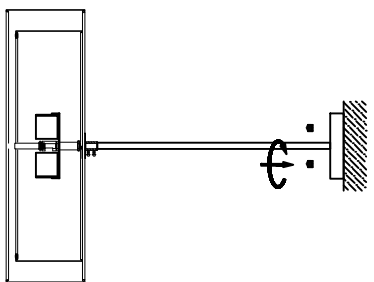


Figure 5

STEP 6 - Install bulb, acrylic and Crystal.

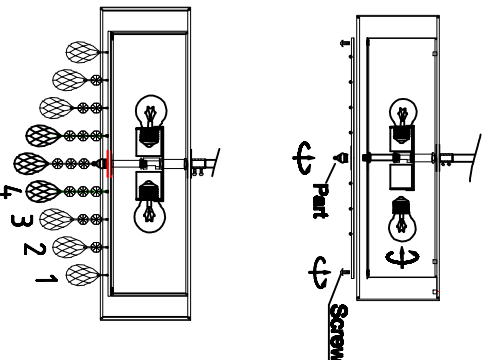


Figure 6