
For Style QS8353P40C Assembly Instruction Sheet #IS-QS8353P40C


quired: Flathand acrewdriver, Philitipe acrewdriver, pilers, who outliers, who elrippers, electrical tape, safely glasses.
Irrect (29) (30 Candelabra Base Buthe 40W Madmum(Not Include).

d Assembly Time: 20-30 minutes
des learning time: 20-30 minutes
des learning and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts
des learning are missing or damaged, do not ellempt to assemble, install, or operate the tixture. Contact customer service for

Warnings and Cautions

Tim off electricity at circuit breaker or main fuee box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the biture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixure from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool

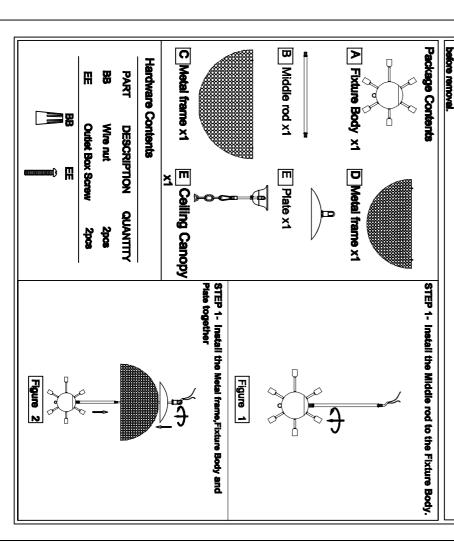

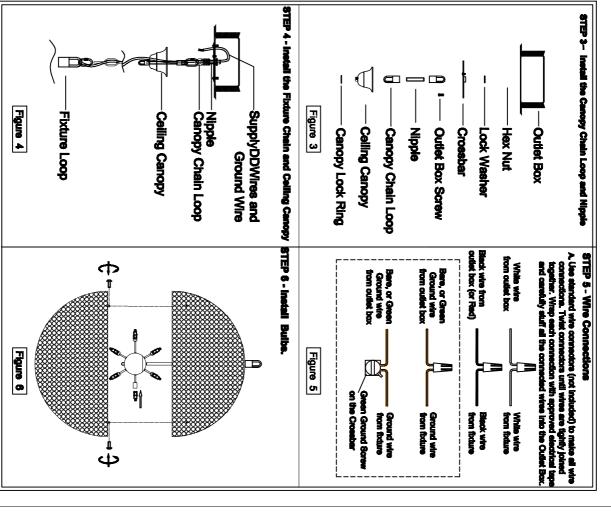

2 of 2