

Home Care Technical Specification


Tread Strips

DN7045

Stock Numbers:

- **DN7045 – Bath Mat**
White
Adhesive Backing
Blister Pack
6 Strips Per Package

Dimensions:

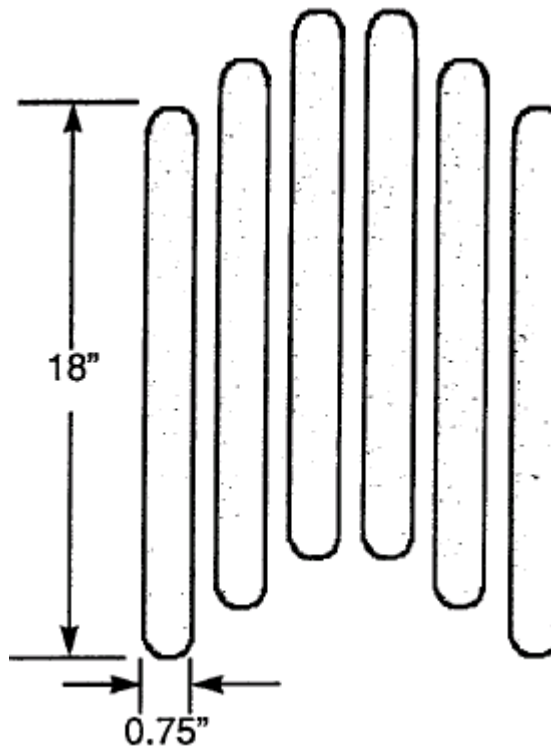

Materials:

Tread Strips are made from white polyvinyl chloride with a pebbled top surface and a waterproof adhesive backing.

Installation Instructions:

1. Prepare floor. Before beginning, make sure the tub or shower floor is completely clean and dry.
2. Separate each strip from the roll and position it on the floor where it will be applied. If needed, shorten each strip to the desired length using scissors.
3. Prepare strips. Peel back 1" of backing paper on each strip.
CAUTION: Do not touch the adhesive backing under the paper.
4. Secure strips. Gently press down the exposed section of the adhesive against the floor surface. Then, remove the remaining paper, stopping periodically to gently press down the new exposed section of each strip. The strips adhere immediately. No drying is needed.

Stock Number: _____ **Tread Strips**
By Creative Specialties International



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •
FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •
FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116
WWW.MOEN.COM
©Copyright Creative Specialties International Literature #BA1691